

Installation Guideline

1 Remove the main unit off the crate and Check all peripheral accessories.

Main Unit

Service Manual

Installation Guideline

Float Assembly



Hose Clamp(L)
Hose Clamp (S)

Filter Wrench


1 Inch Coolant Outlet

Filter Element

Installation Procedure:



1 Install the filter element. 2 Install the 1 inch coolant outlet hose. 3 Install the float assembly hose. 4 Connect to air supply. 5 Place customer supplied oil reservoir under oil outlet.

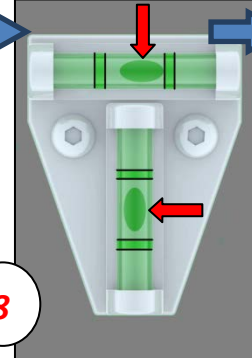

6 Attach float assembly bracket inside of coolant tank. **If there are any suspended solids or floating debris on the surface of the coolant, be sure to remove them before operating the unit.** 7 Be sure coolant return hose is not obstructed. 8 Use the bubble gauge to level the main unit. 9 Turn the coolant volume switch on. Confirm that the air pressure gauge is set to 35 P.S.I.

NOTE: To get a proper reading of air pressure gauge please turn the coolant volume switch On/off then on again.

For additional information refer to Service Manual